



MOUNTING A NEW HARD DRIVE

Effective:
03/26/12

Revision:
A

Mounting a New Hard Drive on an rx2660 Itanium

Necessary Items

1. DB9 to DB9 serial, cross cable.
2. Laptop or other external terminal.
3. Terminal Emulator application (e.g., PuTTY).
4. Hard drive to be mounted.

Steps

1. With the Itanium machine powered down (but still plugged in), insert the new hard drive into an available slot.
2. Connect one end of the DB9 cable to the serial port labeled "Console" on the Itanium machine. Connect the other end of the DB9 cable to a serial COM port on your laptop.
3. Launch a PuTTY session and select the Serial radio button and then the appropriate COM port on your laptop.
4. Login to the machine. Username: Admin / Password: Admin.

MOUNTING A NEW HARD DRIVE

```
COM1 - PuTTY

MP login:
MP password:

MP login: Admin
MP password: *****

Hewlett-Packard Integrity Integrated Lights-Out 2

(c) Copyright Hewlett-Packard Company 1999-2010. All Rights Reserved.

MP Host Name: mp00226494f796

Revision F.02.25

*****
MP ACCESS IS NOT SECURE
Default MP users are currently configured and remote access is enabled.
Modify default users' passwords or delete default users (see UC command)
OR
Disable all types of remote access (see SA command)
*****

MP MAIN MENU:

CO: Console
VFP: Virtual Front Panel
CM: Command Menu
SMCLP: Server Management Command Line Protocol
CL: Console Log
SL: Show Event Logs
HE: Main Help Menu
X: Exit Connection

[mp00226494f796] MP> █
```

5. Power the machine up and type CO (for console). This may take a little while.

MOUNTING A NEW HARD DRIVE


```
COM1 - PuTTY
EFI Boot Manager ver 2.00 [14.62]
OS might use only the primary console set via boot manager or conconfig command

/-----\
|          Boot Menu          |
| WTCMVB VMS8.4              |
| Internal Bootable DVD      |
| OpenVMS on DKA800: PKA0.5000... |
| iLO Virtual Media          |
| Core LAN A                 |
| Core LAN B                 |
| EFI Shell [Built-in]      |
|-----|
| Boot Configuration      |
| System Configuration       |
| Security Configuration     |
|-----|
|          System Overview   |
| hp server rx2660           |
| Serial #: SGH51030VP       |
|-----|
| System Firmware: 4.15 [5027] |
| BMC Version: 5.26          |
| MP Version: F.02.25        |
| Installed Memory: 8192 MB   |
|-----|
| CPU Logical                |
| Module CPUs Speed Status   |
| 0 2 1.42 GHz Active       |
|-----|

Use ^ and v to change option(s). Use Enter to select an option
Boot Configuration
```

6. Immediately navigate to the “Boot Configuration” line using the down arrow on your keyboard and press Enter (you have about 15 seconds).

MOUNTING A NEW HARD DRIVE

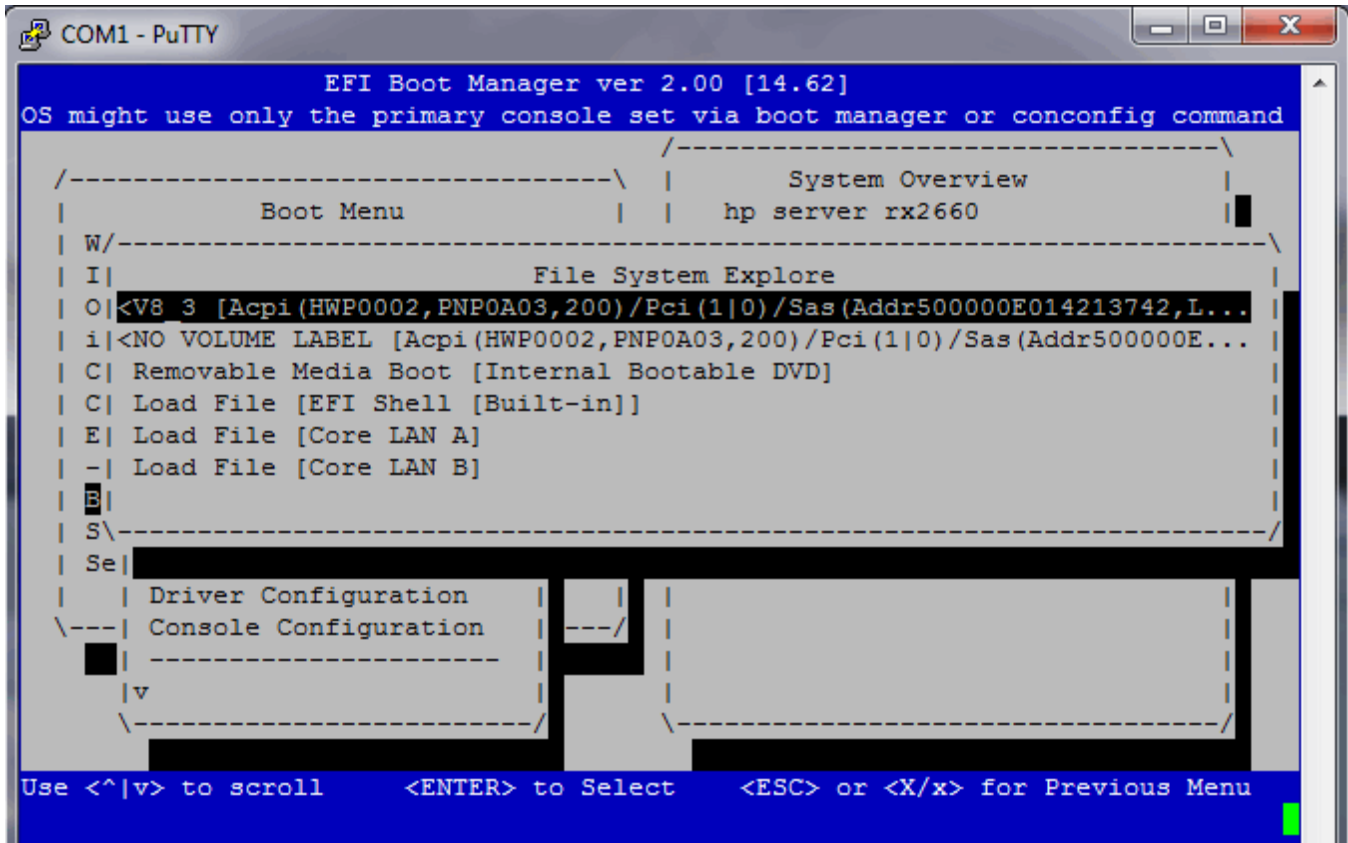


```
COM1 - PuTTY
EFI Boot Manager ver 2.00 [14.62]
OS might use only the primary console set via boot manager or conconfig command

/-----\
|           | |           |
|           | | System Overview |
|           | | hp server rx2660 |
|           | |           |
| W/-----\
| I|           |
| O|<V8 3 [Acpi (HWP0002, PNP0A03, 200) /Pci (1|0) /Sas (Addr500000E014213742, L...
| i|<NO VOLUME LABEL [Acpi (HWP0002, PNP0A03, 200) /Pci (1|0) /Sas (Addr500000E...
| C| Removable Media Boot [Internal Bootable DVD]
| C| Load File [EFI Shell [Built-in]]
| E| Load File [Core LAN A]
| -| Load File [Core LAN B]
| B|
| S\
| Sel
| Driver Configuration
| Console Configuration
| v
|
Use <^|v> to scroll    <ENTER> to Select    <ESC> or <X/x> for Previous Menu
```


8. Navigate to the proper device (typically the top entry) and press Enter.

MOUNTING A NEW HARD DRIVE

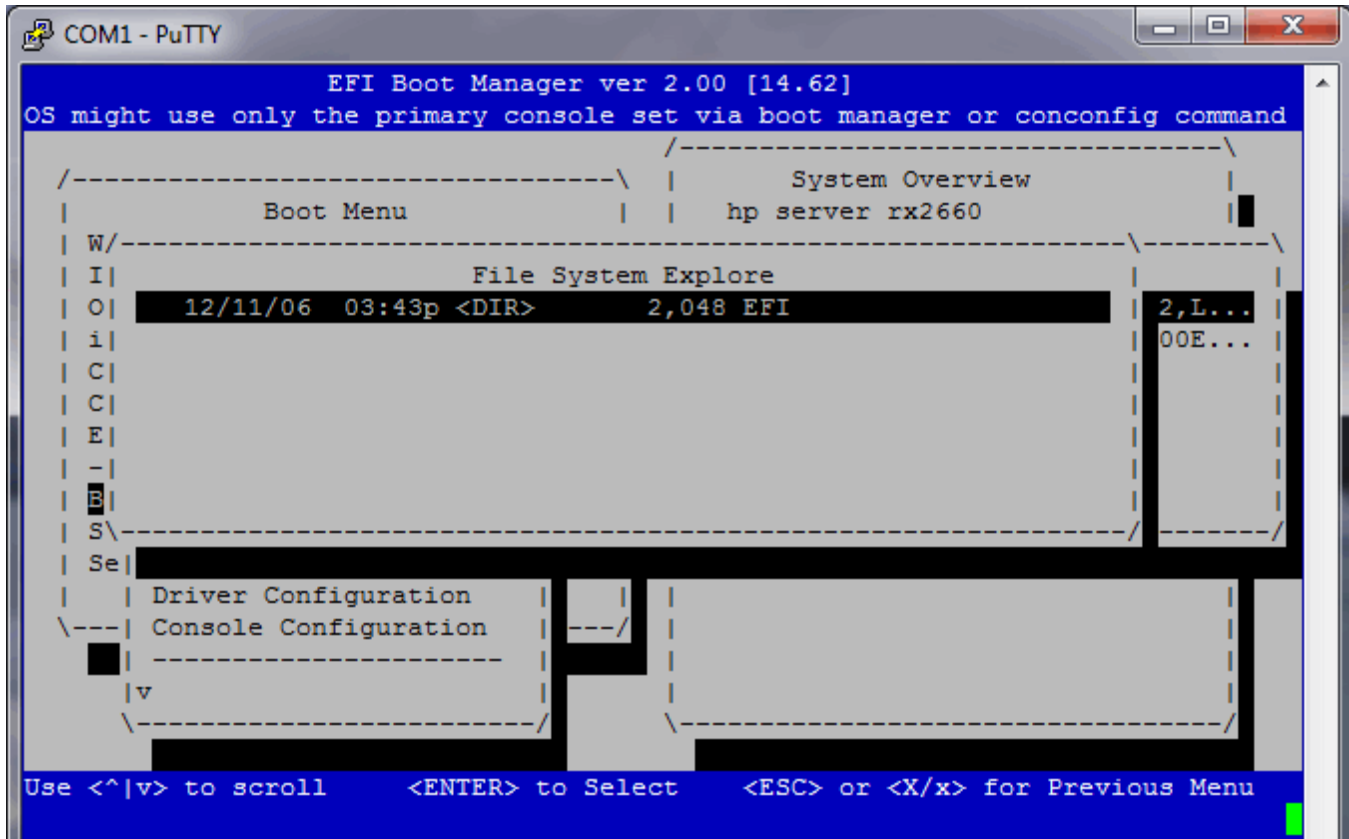

9. There is no option on this step, you must select EFI. Press Enter again and wait for the screen to refresh.

MOUNTING A NEW HARD DRIVE

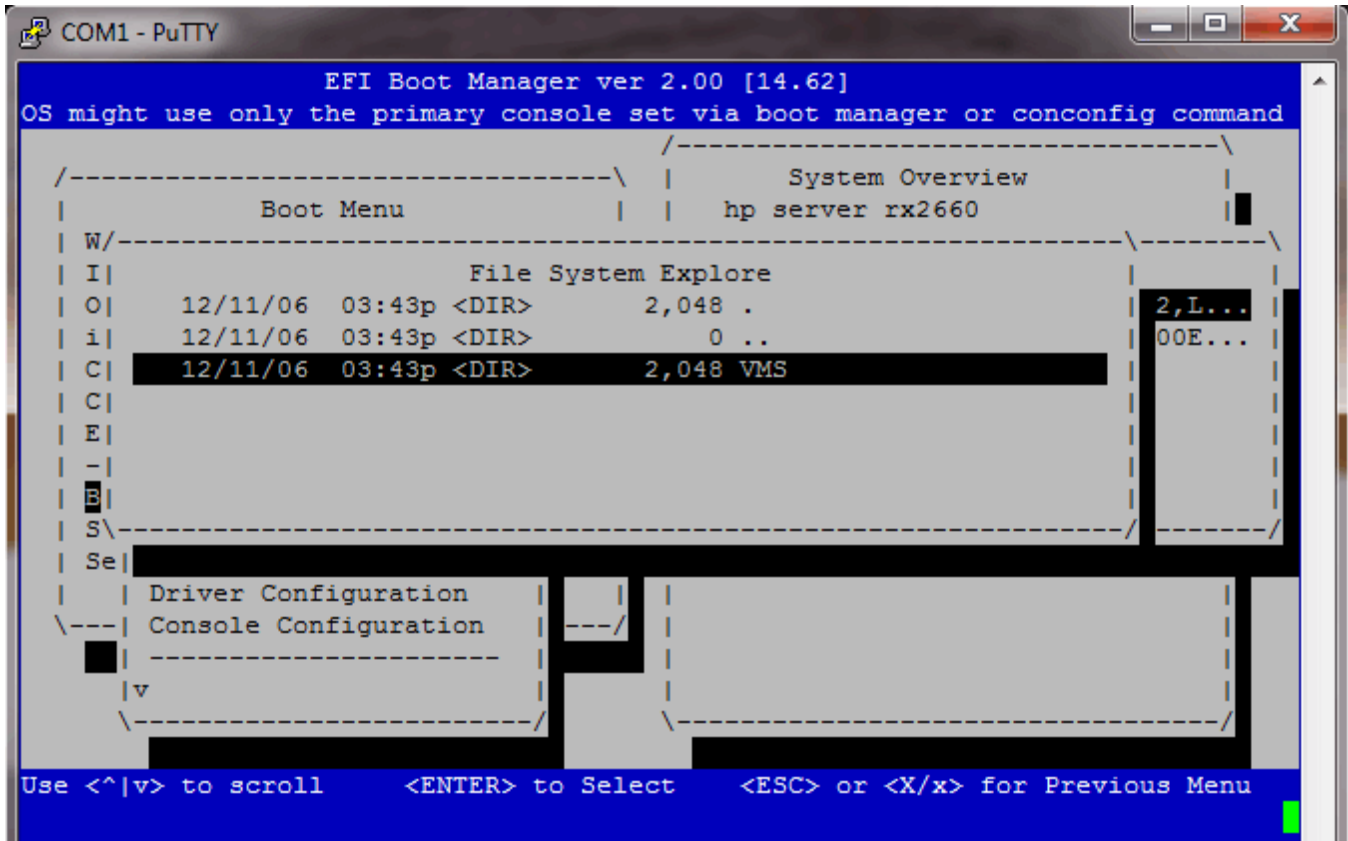

10. Navigate to the "VMS" line and press Enter.

MOUNTING A NEW HARD DRIVE

```
COM1 - PuTTY
EFI Boot Manager ver 2.00 [14.62]
OS might use only the primary console set via boot manager or conconfig command


/-----\ | System Overview |
| Boot Menu | | hp server rx2660 |
\-----/

W/-----\
| I|^ | File System Explore |
| O| 12/11/06 03:43p <DIR> 2,048 .. | 2,L...
| i| 12/11/06 03:43p <DIR> 2,048 UPDATE | 00E...
| C| 12/11/06 03:44p <DIR> 2,048 TOOLS |
| C| 04/14/08 11:26p 300,544 VMS_SET.EFI |
| E| 04/14/08 11:26p 326,656 VMS_BCFG.EFI |
| -| 04/14/08 11:26p 1,213,952 VMS_LOADER.EFI |
| B|v |
| S\ |
| Se|
| | Driver Configuration |
\---| Console Configuration |---/
| | |
| v |
\-----/

Use <^|v> to scroll <ENTER> to Select <ESC> or <X/x> for Previous Menu
VMS_LOADER.EFI
```


11. Navigate down to the line that reads “VMS_LOADER.EFI” (this may be down a page) and press Enter.

MOUNTING A NEW HARD DRIVE

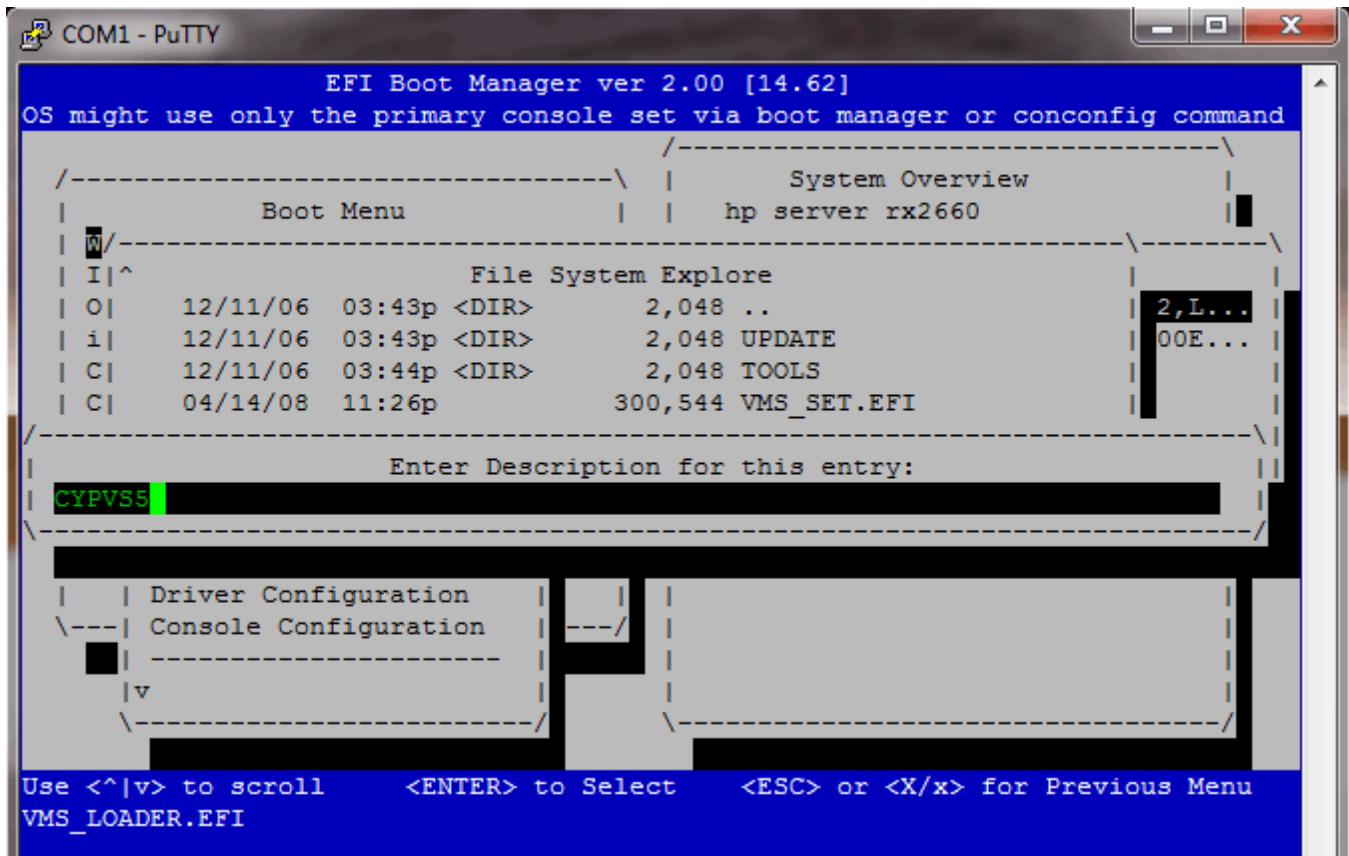

12. Enter a description for the hard drive (e.g., CYPV55).

MOUNTING A NEW HARD DRIVE

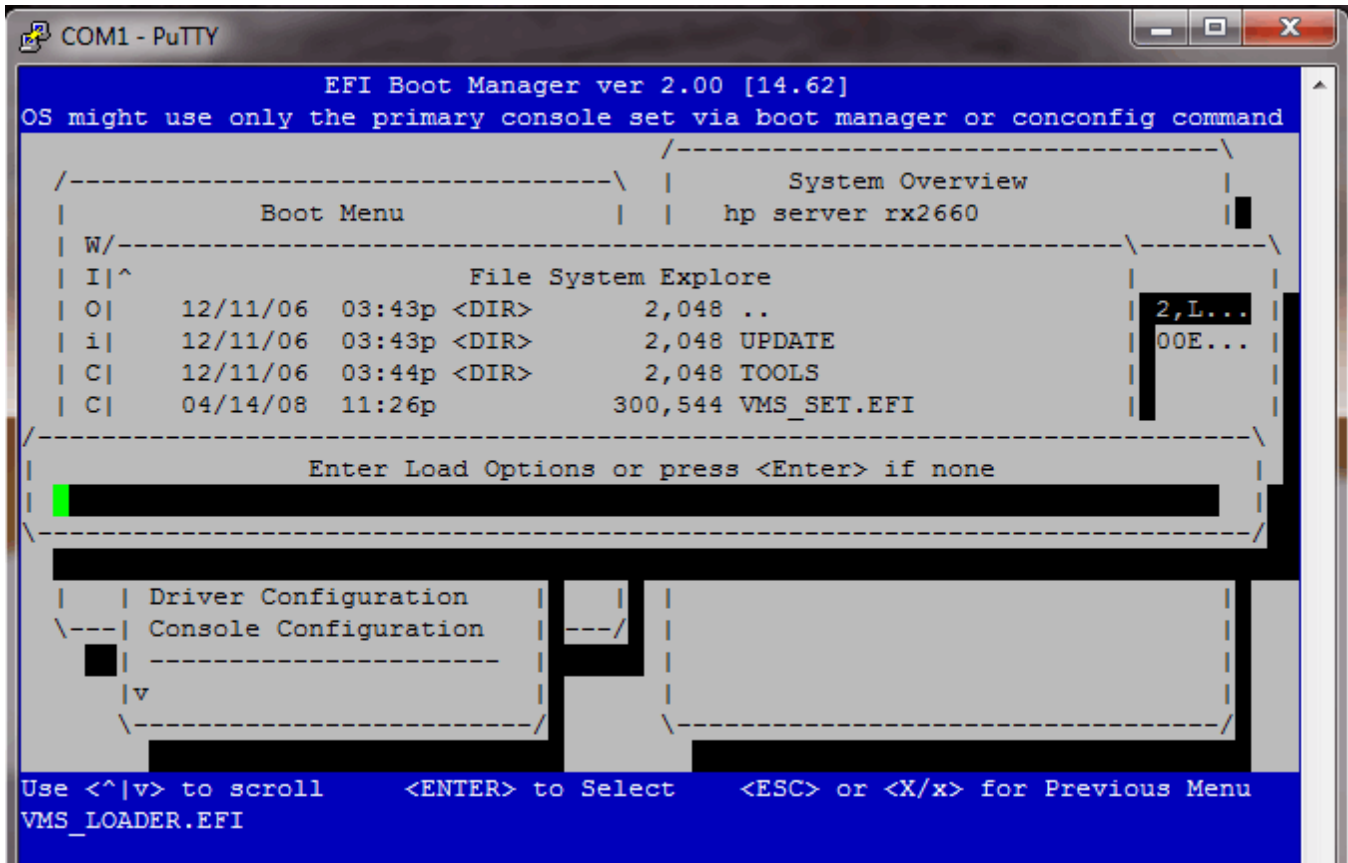


The screenshot shows the EFI Boot Manager interface. At the top, it says "EFI Boot Manager ver 2.00 [14.62]" and "OS might use only the primary console set via boot manager or conconfig command". Below this is a "System Overview" section showing "hp server rx2660". The main area is a "File System Explore" view showing a directory listing:

File Name	Size	Attributes	Path
..	2,048	<DIR>	2,L...
UPDATE	2,048	<DIR>	00E...
TOOLS	2,048	<DIR>	
VMS_SET.EFI	300,544		

Below the file system explore is a section for "Enter Load Options or press <Enter> if none", which is currently blank. At the bottom, there are navigation instructions: "Use <^|v> to scroll", "<ENTER> to Select", and "<ESC> or <X/x> for Previous Menu". The current selection is "VMS_LOADER.EFI".


13. On the next screen, leave the Load Options blank and press Enter.

MOUNTING A NEW HARD DRIVE

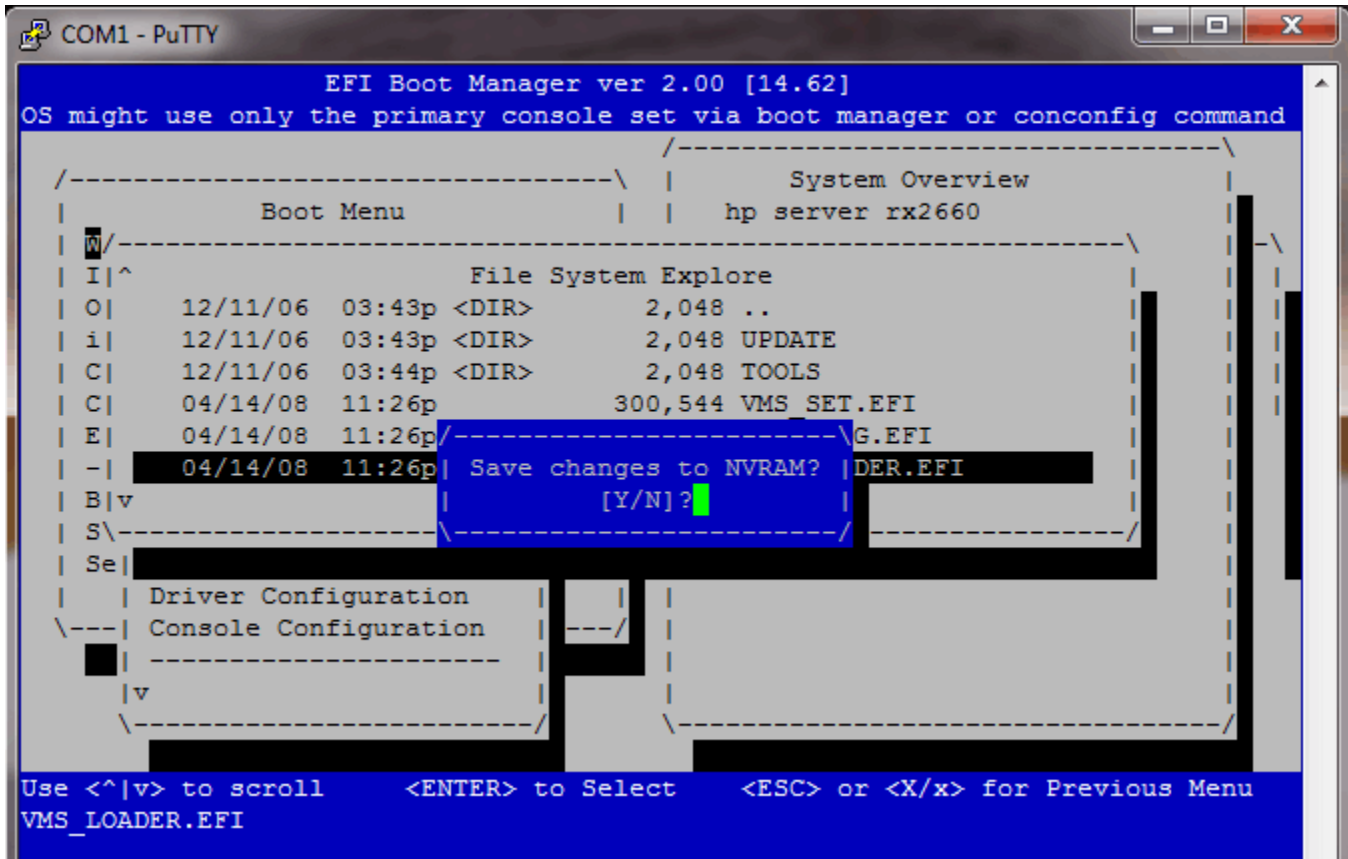

14. Type "Y" at the "Save changes to NVRAM?" prompt.

MOUNTING A NEW HARD DRIVE

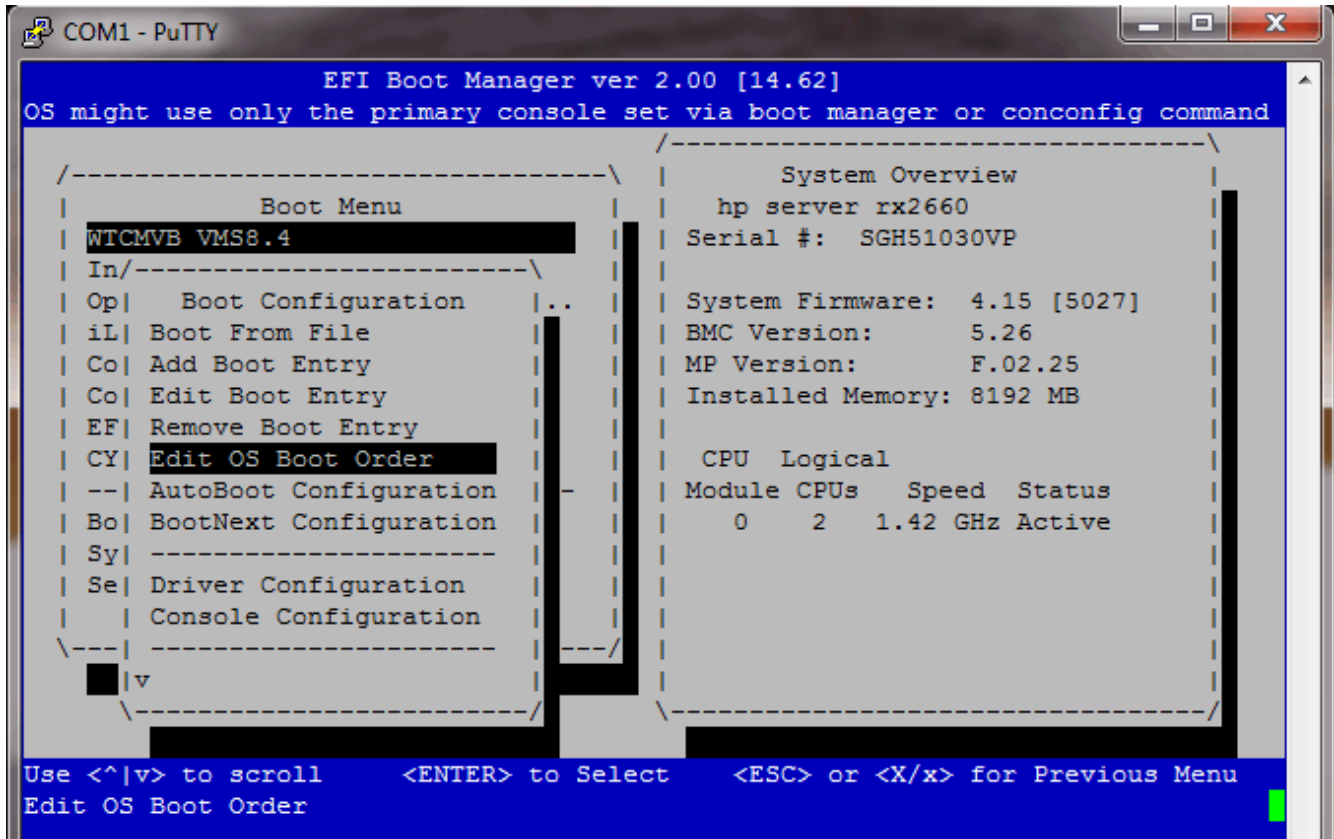

The screenshot shows the EFI Boot Manager interface. The title bar reads "COM1 - PuTTY". The main window has a blue header with the text "EFI Boot Manager ver 2.00 [14.62]" and "OS might use only the primary console set via boot manager or conconfig command". The interface is divided into two main sections: "Boot Menu" on the left and "System Overview" on the right. The "Boot Menu" section lists several options, with "Edit OS Boot Order" highlighted. The "System Overview" section displays system information including the model "hp server rx2660", serial number "SGH51030VP", system firmware version "4.15 [5027]", BMC version "5.26", MP version "F.02.25", and installed memory "8192 MB". Below the "System Overview" section, there is a table for "CPU Logical" with columns for "Module", "CPUs", "Speed", and "Status". The table shows two active CPUs at 1.42 GHz. At the bottom of the screen, there is a blue bar with instructions: "Use <^|v> to scroll", "<ENTER> to Select", and "<ESC> or <X/x> for Previous Menu". The text "Edit OS Boot Order" is also visible in the bottom left corner of the blue bar.

```
COM1 - PuTTY
EFI Boot Manager ver 2.00 [14.62]
OS might use only the primary console set via boot manager or conconfig command

/-----\
|          Boot Menu          | |          System Overview          | | |
| WTCMVB VMS8.4              | | hp server rx2660                  | |
| In/-----\                | | Serial #:  SGH51030VP            | |
| Op|  Boot Configuration    | | System Firmware:  4.15 [5027]    | |
| iL|  Boot From File        | | BMC Version:      5.26           | |
| Co|  Add Boot Entry        | | MP Version:       F.02.25       | |
| Co|  Edit Boot Entry       | | Installed Memory: 8192 MB       | |
| EF|  Remove Boot Entry     | |                                  | |
| CY|  Edit OS Boot Order    | | CPU Logical                      | |
| --|  AutoBoot Configuration| | Module CPUs  Speed  Status      | |
| Bo|  BootNext Configuration| |      0      2   1.42 GHz Active  | |
| Sy|  -----              | |                                  | |
| Se|  Driver Configuration  | |                                  | |
|   |  Console Configuration  | |                                  | |
|-----|-----|
|v
Use <^|v> to scroll      <ENTER> to Select      <ESC> or <X/x> for Previous Menu
Edit OS Boot Order
```

15. When the screen refreshes, navigate to "Edit OS Boot Order" and press Enter.

MOUNTING A NEW HARD DRIVE

```
COM1 - PuTTY
EFI Boot Manager ver 2.00 [14.62]
OS might use only the primary console set via boot manager or conconfig command

/-----\
|          Boot Menu          | |          System Overview          | | | |
| WTCMVB VMS8.4              | | hp server rx2660                  |
| In/-----\              | | Serial #: SGH51030VP             |
| Op| Boot Configuration    |..| | System Firmware: 4.15 [5027]    |
| iL| Boot From File        | | | BMC Version: 5.26              |
| Co| Ad/-----\          | |-----\          | | F.02.25              |
| Co| Ed| Edit OS Boot Order | |: 8192 MB                          |
| EF| Re| WTCMVB VMS8.4     | | |                                     |
| CY| Ed| Internal Bootable DVD | | |                                     |
| --| Au| OpenVMS on DKA800: PKA0.5000-C500-4738-C649 | | ed Status              |
| Bo| Bo| iLO Virtual Media  | | |                                     |
| Sy| --| Core LAN A         | | |                                     |
| Se| Dr| Core LAN B         | | |                                     |
|   | Co| EFI Shell [Built-in] | | |                                     |
\---| --| CYPVS5              | | |                                     |
|v |
\-----\

Use <^|v> to scroll      <ENTER> to Select      <ESC> or <X/x> for Previous Menu
Use <^|v> to move option <ENTER> to select position <ESC> to Exit
```

16. Navigate to the drive description from before (e.g., CYPVS5) and press Enter. This will change the color of the entry. Now, using the arrow keys on your keyboard, move that selection to the top.

MOUNTING A NEW HARD DRIVE


```
COM1 - PuTTY
EFI Boot Manager ver 2.00 [14.62]
OS might use only the primary console set via boot manager or conconfig command

/-----\
|          Boot Menu          | |          System Overview          | | |
| WTCMVB VMS8.4              | | hp server rx2660                  |
| In/-----\                | | Serial #: SGH51030VP             |
| Op| Boot Configuration    |..| | System Firmware: 4.15 [5027]    |
| iL| Boot From File        | | | BMC Version: 5.26              |
| Co| Ad/-----\            | | F.02.25                          |
| Co| Ed| Edit OS Boot Order | | : 8192 MB                        |
| EF| Re| CYPVS5             | |                                     |
| CY| Ed| WTCMVB VMS8.4      | |                                     |
| --| Au| Internal Bootable DVD | | ed Status                        |
| Bo| Bo| OpenVMS on DKA800: PKA0.5000-C500-4738-C649 | | GHz Active                      |
| Sy| --| iLO Virtual Media   | |                                     |
| Se| Dr| Core LAN A          | |                                     |
|   | Co| Core LAN B         | |                                     |
\---| --| EFI Shell [Built-in]| |                                     |
|v |
\---\


Use <^|v> to scroll      <ENTER> to Select      <ESC> or <X/x> for Previous Menu
Select option to move using <ENTER> or <ESC> to Exit
```

17. Press Enter, the color will change back.

MOUNTING A NEW HARD DRIVE

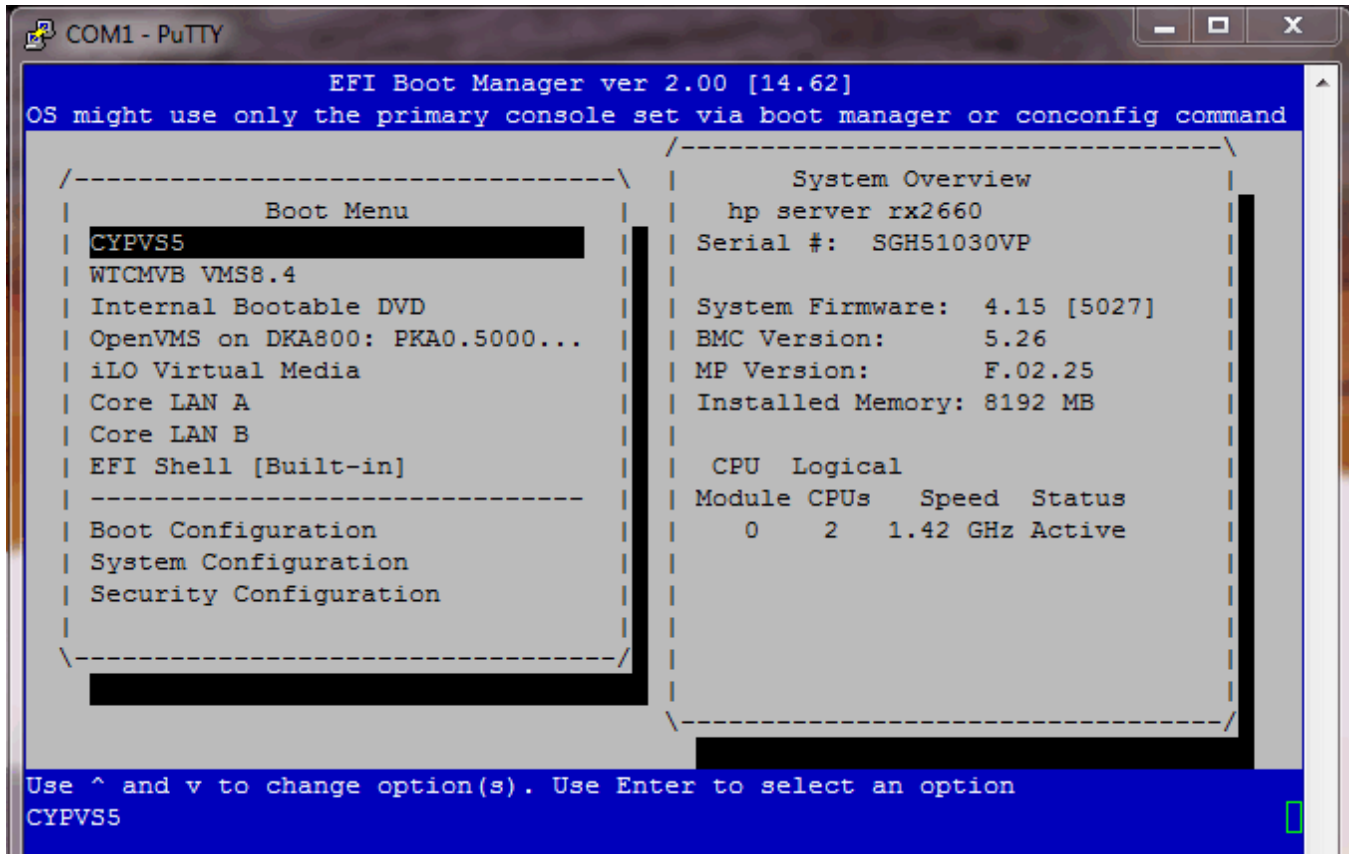


18. Press "X" (twice) until you return to the original screen. Your drive will now display at the top of the list. Press Enter. This will begin re-booting the machine. To ensure that the machine automatically starts after a power cycle you will need to do an additional couple of steps.

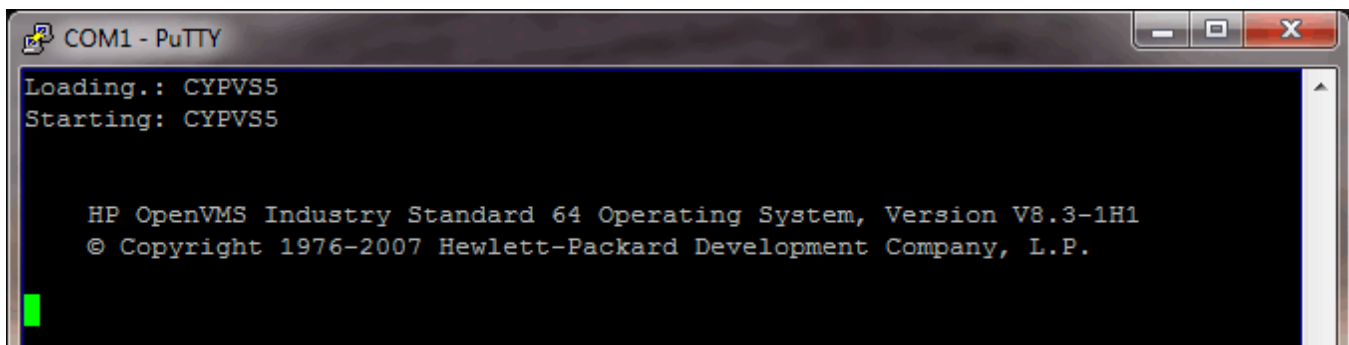

19. After the machine has re-booted, press <Ctrl> B to return to the main menu.

MOUNTING A NEW HARD DRIVE

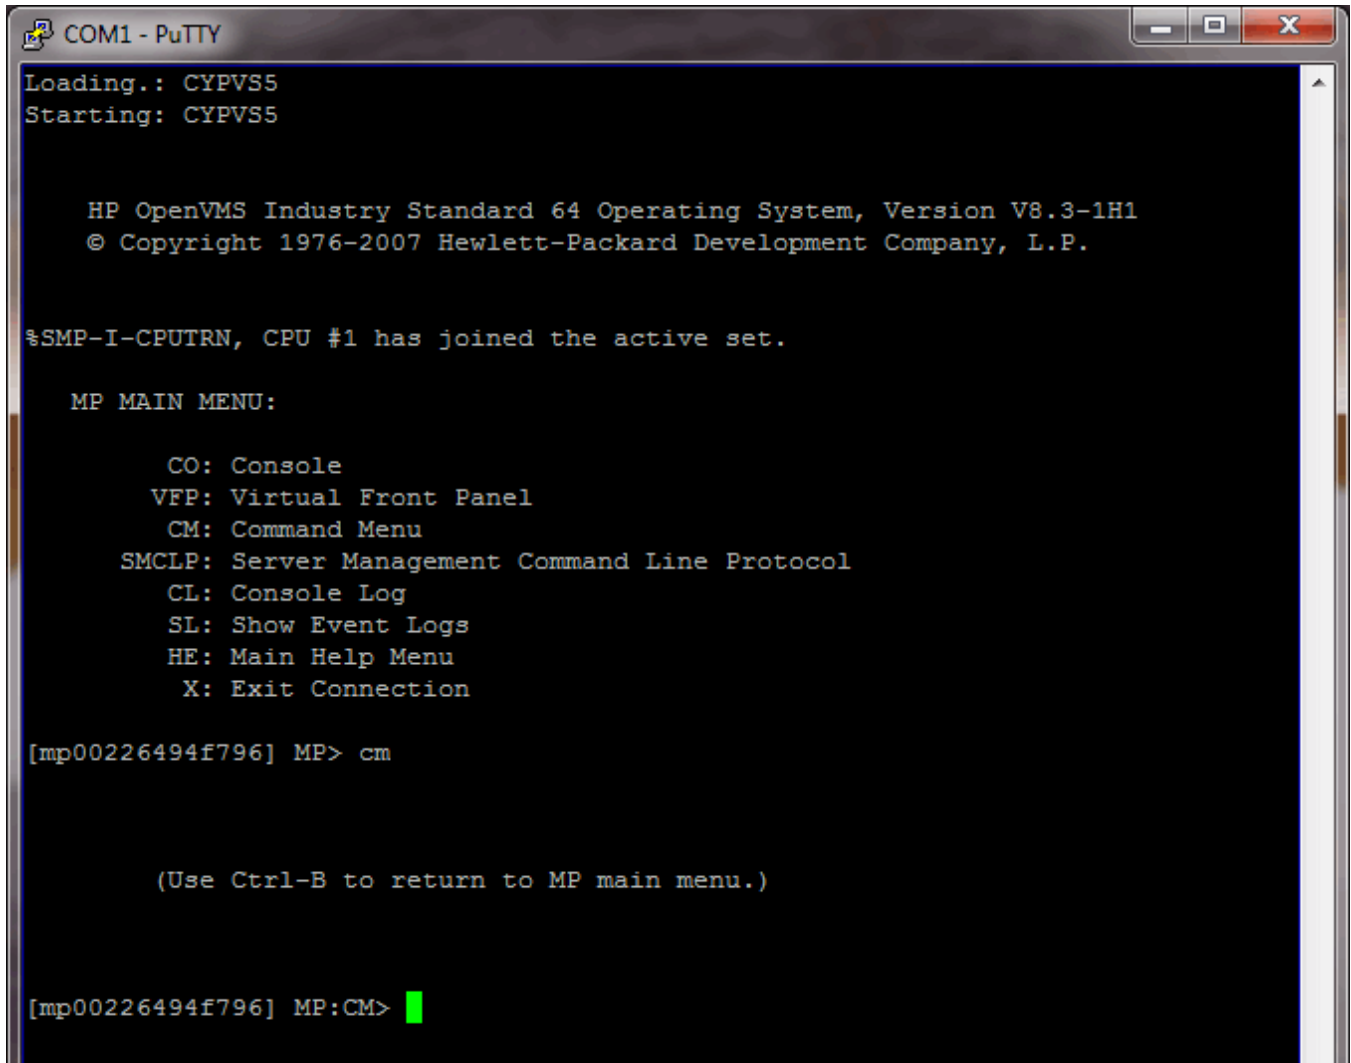

```
COM1 - PuTTY
Loading.: CYPVS5
Starting: CYPVS5

      HP OpenVMS Industry Standard 64 Operating System, Version V8.3-1H1
      © Copyright 1976-2007 Hewlett-Packard Development Company, L.P.

%SMP-I-CPUTRN, CPU #1 has joined the active set.

MP MAIN MENU:

      CO: Console
      VFP: Virtual Front Panel
      CM: Command Menu
      SMCLP: Server Management Command Line Protocol
      CL: Console Log
      SL: Show Event Logs
      HE: Main Help Menu
      X: Exit Connection

[mp00226494f796] MP> cm

      (Use Ctrl-B to return to MP main menu.)

[mp00226494f796] MP:CM> █
```

20. Type “CM” for Command Menu and press Enter.

MOUNTING A NEW HARD DRIVE

```
[mp00226494f796] MP:CM> pr

PR

Power Restore Policy Configuration:
  Current -> ON - Automatically Power On
             OFF - Remain Powered Off
             P - Restore Previous Power State

Enter new value, or [Q] to Quit: █
```

21. Type “PR” to bring up the Power Restore Policy Configuration. Verify the current option is set to “ON – Automatically Power On”. If not, type “ON” and press Enter.

```
COM1 - PuTTY

Power Restore Policy Configuration:
  Current -> ON - Automatically Power On
             OFF - Remain Powered Off
             P - Restore Previous Power State

Enter new value, or [Q] to Quit: q
q

-> Current Power Restore Policy Configuration has been retained

[mp00226494f796] MP:CM>

MP MAIN MENU:

  CO: Console
  VFP: Virtual Front Panel
  CM: Command Menu
  SMCLP: Server Management Command Line Protocol
  CL: Console Log
  SL: Show Event Logs
  HE: Main Help Menu
  X: Exit Connection

[mp00226494f796] MP> x
```

22. Type “Q” to quit and then <Ctrl> B to return to the main menu. Type “X” to exit the connection.